

# Fitting Instructions

Audi SQ5 3.0TFSI OEM+ Intake

Fitting Difficulty



## Contents

Description	Quantity
SQ5 Intake hose	1
Replacement filter	1
80-100 Hose clamp	1
60-80 Hose clamp	1
Revo Tag	1

## Recommended Tools

Tools	Size
Ratchet	
Sockets	7mm
Socket extension	
Torx Bits	T25



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.



# Fitting Instructions

## Audi SQ5 3.0TFSI OEM+ Intake


Fitting Difficulty




- 1 Remove engine cover



- 2 Remove OE intake pipe by loosening the two hose clamps.

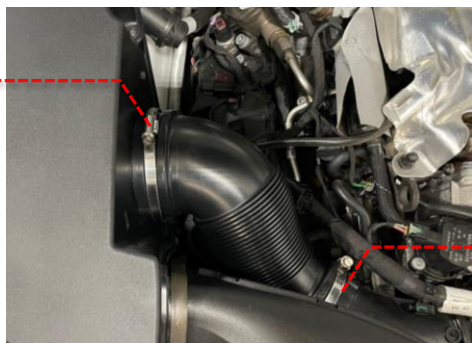

- 3 Remove airbox lid by loosening the 6 x T25 torx screws holding it down.

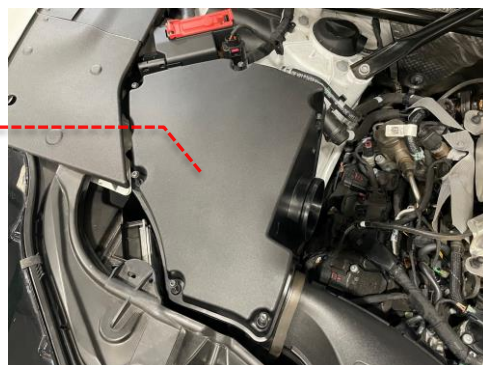

- 4 Remove OE air filter from lid by twisting out of the locking tabs. Then install the Revo filter by slotting into the tabs and twisting into place.




# Fitting Instructions

## Audi SQ5 3.0TFSI OEM+ Intake

Fitting Difficulty



- 5 Re-install the lid and screw back down. Then install the new Revo silicone intake hose using the supplied hose clamps and secure in place.

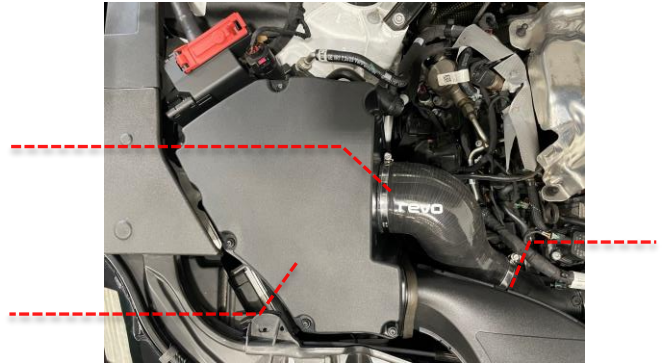

- 6 Finally apply your Revo badge to the top of the airbox as shown. Ensure all clamps and screws are tight and replace your engine cover.

Your installation is now complete.



# Fitting Instructions

Fitting Difficulty



Audi SQ5 3.0TFSI OEM+ Intake

ITEM NO.	DESCRIPTION	QTY.
1	B9 SQ5 INTAKE HOSE	1
2	REVO TAG	1
3	60-80MM STAINLESS STEEL WORM DRIVE HOSE CLAMP	1
4	80-100MM STAINLESS STEEL WORM DRIVE HOSE CLAMP	1
5	B9 A4/S4 FILTER	1

**revo**

TITLE: B9 SQ5 OEM+ INTAKE KIT WORKING INSTRUCTIONS

SIZE DWG. NO. REV. RA841M200400 00

SCALE: 1:3 SHEET 1 OF 1