

Fitting Instructions

Revo OEM+ Intake Upgrade Kit 1.5 TSI/TFSI MQB Platform

Fitting Difficulty



Contents

| Description | |
|---------------------------|---|
| Panel Filter | 1 |
| Silicone Intake Hose | 1 |
| Machined Turbo Inlet | 1 |
| Machined Bung | 1 |
| 90-110 Hose Clamp | 1 |
| 50-70 Hose Clamp | 1 |
| 16-27 Hose Clamp | 3 |
| M6x16 SS Cap Head Bolt | 2 |
| Lock Washer | 2 |
| EXTRA BREATHER KIT | |
| Silicone Hose Joiner | 1 |
| Machined Pipe Joiner | 1 |
| Machined Breather Adapter | 1 |
| 16-27 Hose Clamp | 3 |

Recommended Tools

| Tools | Size |
|----------------------|---------|
| Ratchet | |
| Socket | 7mm |
| Allen Key/Head | 5mm |
| Torx Bits | T25/T30 |
| Tension Clamp Pliers | |
| Thin Nose Pliers | |



Before starting, please ensure that engine is cool. Engine temperatures can remain high for a substantial amount of time after use.




Fitting Instructions

Revo OEM+ Intake Upgrade Kit 1.5 TSI/TFSI MQB Platform


Fitting Difficulty



- 1 Loosen intake hose clamp and the 7 x T25 torx screws and remove the airbox.

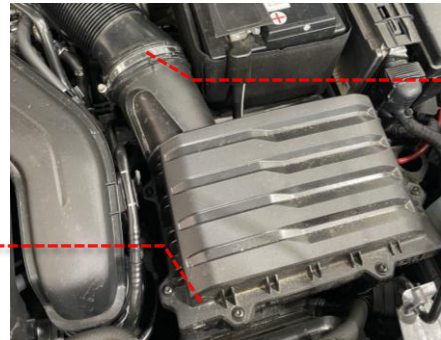

- 2 Remove both the air filter and large particle filter from the airbox.

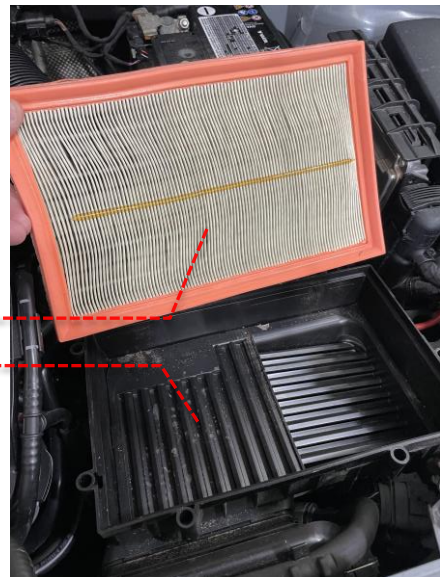

- 3 Remove the OE intake pipe using constant tension clamps and pulling from turbo inlet.



Fitting Instructions

Revo OEM+ Intake Upgrade Kit 1.5 TSI/TFSI MQB Platform


Fitting Difficulty




- 4 **Vehicles with extra breather only** - unclip the two breather pipes from the turbo inlet pipe.




- 5 Remove turbo inlet pipe by loosening the 2 x T30 torx bolts holding it to the turbo.

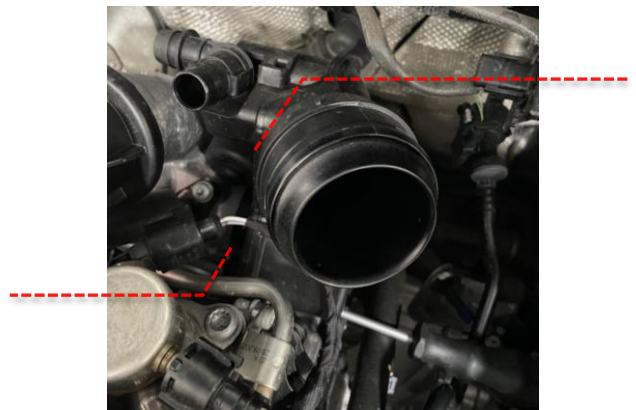

- 6 **Vehicles with extra breather only** - remove the take-off from the turbo inlet pipe using a pair of thin nose pliers to pop it out of housing.

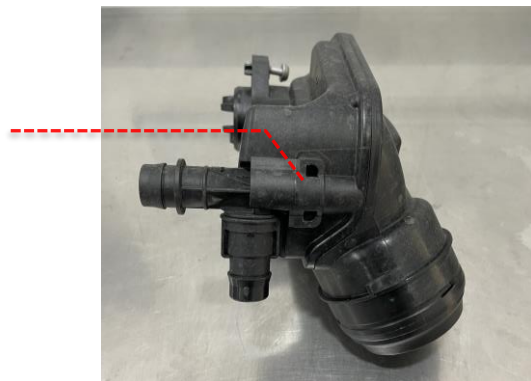

- 7 **Vehicles with extra breather only** - assemble the breather take-off pipe as shown using the silicone joiner pipe, machined joiner, machined take off adapter and hose clamps.

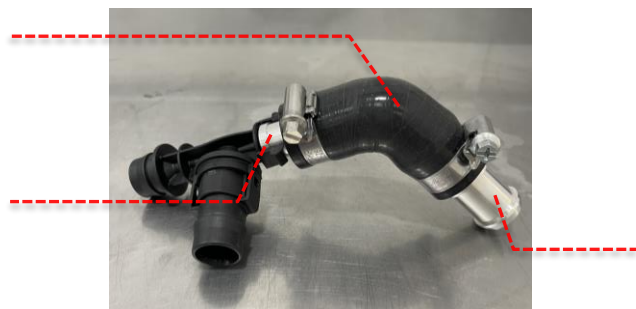

Fitting Instructions

Revo OEM+ Intake Upgrade Kit 1.5 TSI/TFSI MQB Platform


Fitting Difficulty




- 8 Depending on application, either attach the breather assembly to the silicone intake hose or use the machined bung and hose clamp, as shown.



- 9 Install the Revo machined inlet adapter, pushing the adapter into the turbo entry and then securing with the M6x16 cap head bolts and lock washers.

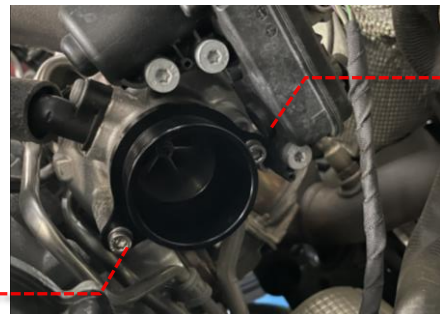

- 10 Install the Revo panel filter and refit the airbox lid.

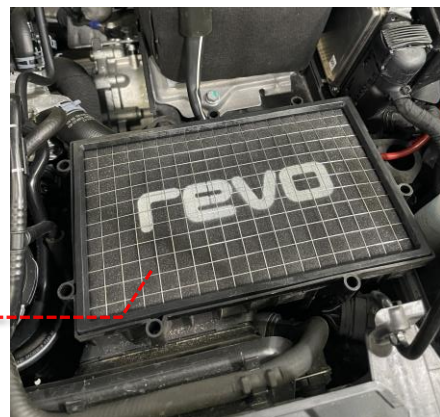

Fitting Instructions

Revo OEM+ Intake Upgrade Kit 1.5 TSI/TFSI MQB Platform

Fitting Difficulty



- 11 Install the new silicone intake hose using the 50-70 and 90-110 hose clamps. **Vehicles with extra breather only** - connect the two breather pipes to the take off as shown.

Check all clamps are secure and test drive the vehicle to ensure vehicle performs correctly and there are no leaks/part interference during operation. Your installation is now complete!



Fitting Instructions

Revo OEM+ Intake Upgrade Kit 1.5 TSI/TFSI MQB Platform

Fitting Difficulty



revo
 TITLE
 MQB 1.5TSI OEM+ INTAKE KIT
 SITE DWG. NO. REV
B 00
 SCALE 1:2 WEIGHT: SHEET 1 OF 1