

# Fitting Instructions

Fitting Difficulty



## MQB Evo High Output 2.0TSI OEM+ Intake kit

### Contents

Description	Quantity
Intake hose	1
Repalcment Hi Flo Filter	1
Machined DV adapter	1
70-90 Hose clamps	2
25-40 Hose clamp	1

### Recommended Tools

Tools	Size
Ratchet	
Sockets	7mm
Socket extension	
Torx Bits	T25
Constant Tension Pliers	



Before starting, please ensure that the battery is disconnected and the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.




# Fitting Instructions

## MQB Evo High Output 2.0TSI OEM+ Intake kit

Fitting Difficulty



- 1 Loosen hose clamp at rear of pipe and then remove the tension clamp at the airbox end.

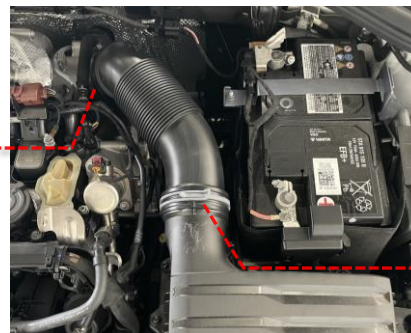


- 2 Remove the intake pipe from the car, unclipping the DV hose from the bottom of the pipe.



- 3 Loosely assemble the machined DV adapter using the 25-40 hose clamp onto the hose so you can twist it as required.



- 4 Remove the 8 x T25 screws on the airbox lid. Remove the OE paper filter and snow filter.

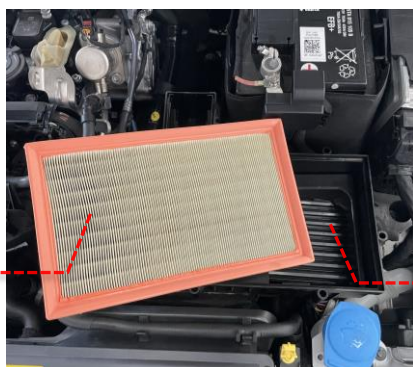


## Fitting Instructions

Fitting Difficulty




### MQB Evo High Output 2.0TSI OEM+ Intake kit

- 5 Install the new Revo hi flow filter in the airbox and re-install the lid.

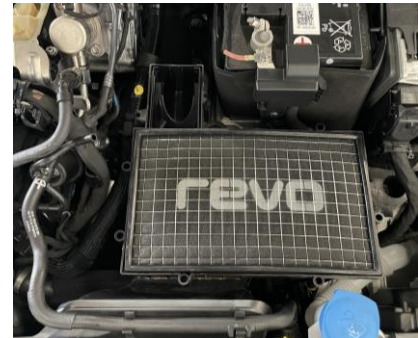

- 6 Install the new Revo intake silicone hose using the supplied 70-90 hose clamps. Click the DV pipe into the adapter and tighten hose clamps. Check everything is tight and your installation is complete.

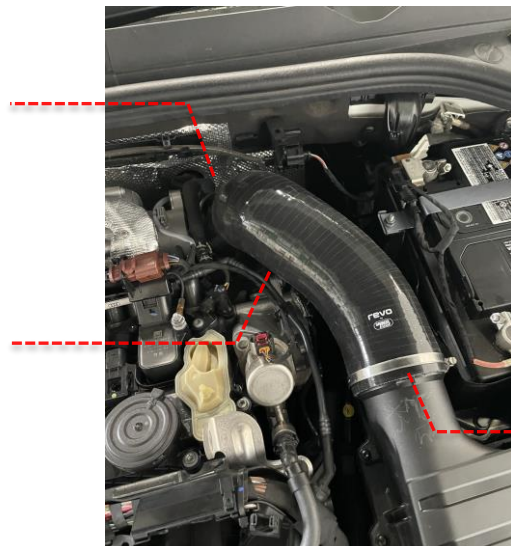


# Fitting Instructions

Fitting Difficulty



MQB Evo High Output 2.0TSI OEM+ Intake kit

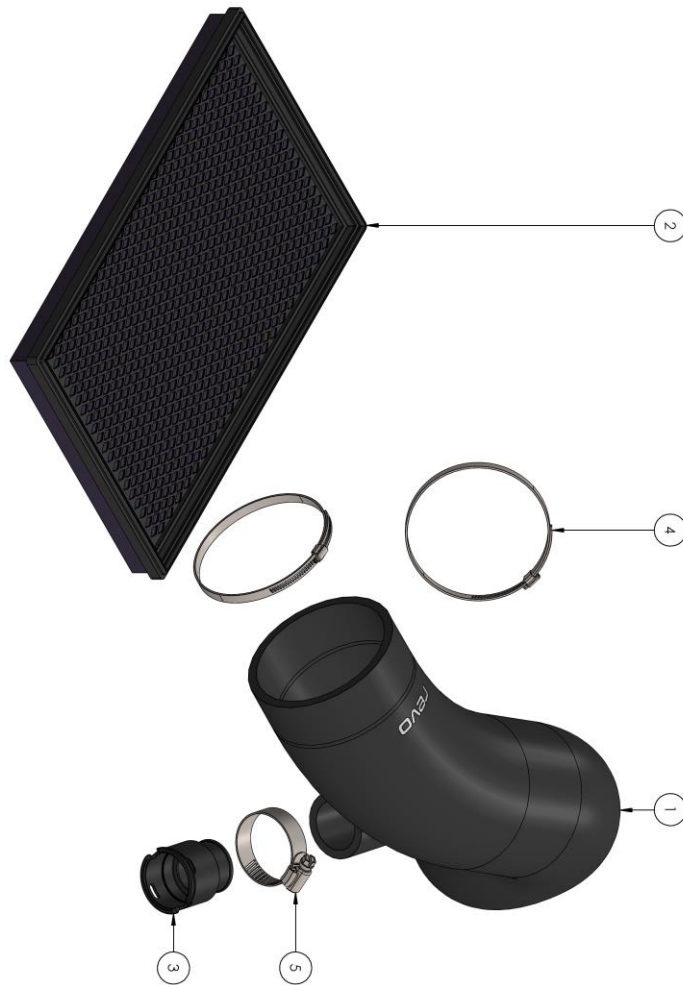

ITEM NO.	DESCRIPTION	QTY.
1	REVO HOSE	1
2	REVO PANEL FILTER	1
3	REVO DV HOSE CONNECTOR	1
4	70-90MM STAINLESS STEEL WORM DRIVE HOSE CLAMP	2
5	25-40MM STAINLESS STEEL WORM DRIVE HOSE CLAMP	1