

Fitting Instructions

Revo Torque Mount Kit Focus RS MK 2/3

Fitting Difficulty



Contents

Description	
Revo Rear Mount	1
M12x80 Hex Head Bolt	1
M12 Flange Head Nut	1
M12 Internal Lock Washer	1

Recommended Tools

Tools	Size
Ratchet	
Extention	
Sockets	15, 19mm
Spanner	17, 19mm
Copper Grease	



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.



Fitting Instructions


Revo Torque Mount Kit Focus RS MK 2/3

Fitting Difficulty



- 1 Remove the under tray from the vehicle to gain access to the mount.

- 2 Remove the front bolt on the mount, then remove the 3 x bolts holding the mounting plate to the gearbox, once you have taken these out you can remove the plate from the car.

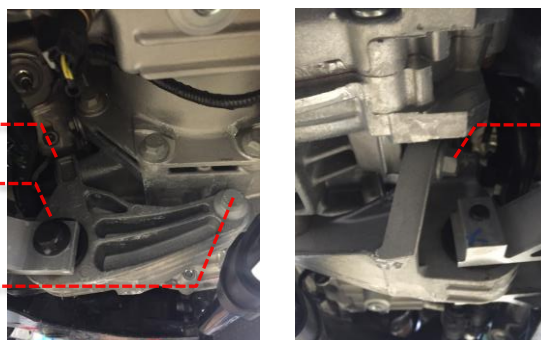

- 3 Remove the rear bolt from the mount and slide out of the housing.



- 4 Assemble the new Revo mount to the plate you removed, as shown, using the supplied M12 bolt, M12 washer and M12 nut and then tighten. Note: the Revo logo must be facing down.



Fitting Instructions

Revo Torque Mount Kit Focus RS MK 2/3


Fitting Difficulty



- 5 Apply a small amount of copper grease to the top and bottom of the bushing. Next slide the new Revo mount into position and secure in place using the bolt you removed earlier and torque to 80Nm.



- 6 Reinstall the 3 x bolts holding the plate to the gearbox you removed earlier and torque to 40Nm. You may need to lever the gearbox to align all the bolt holes.

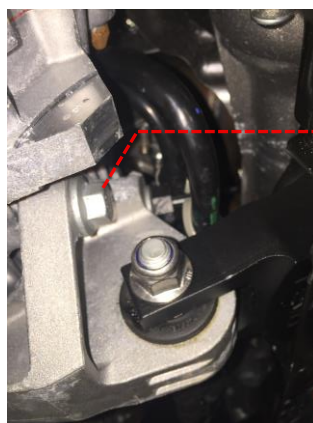

- 7 Refit all OE parts back to vehicle. Reinstallation is the reverse of removal. Follow any factory torque specification during reinstallation of OE parts. Test drive the vehicle to ensure everything is okay. Your installation is now complete!

*** Dealer note: please hand the "Assembly Sheet" to the customer to retain for their records.**