

Fitting Instructions

Fitting Difficulty

Revo Turbo Muffler Delete Kit 2.0 TFSI/TSI MQB Evo Transverse Mount



Contents

Description	Quantity
Revo Muffler Delete	1
Viton O-ring (installed)	1

Recommended Tools

Tools	Size
Ratchet	
Socket	7mm
Torx	T30
Tension Clamps	



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.




Fitting Instructions

Fitting Difficulty


Revo Turbo Muffler Delete Kit 2.0 TFSI/TSI MQB Evo Transverse Mount




- 1 Remove the airbox and back pipe by loosening the hose clamp securing the pipe to the turbo elbow and the tension clamp at the airbox, then pull upwards on the airbox to remove from rubber grommets.

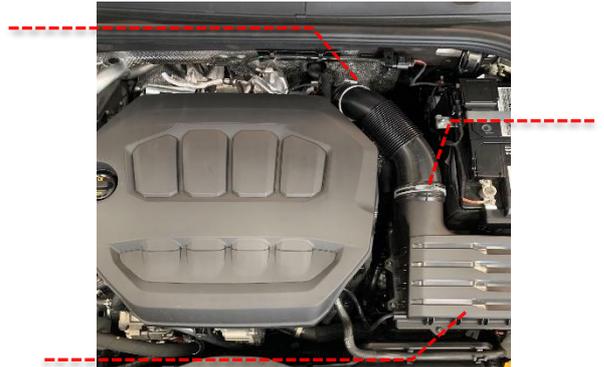

- 2 Next, loosen the hose clamp securing the discharge hose to the OE muffler and discharge pipe and remove. You may need to loosen the discharge pipe if this is too tight by removing the T30 bolt on the pipe.

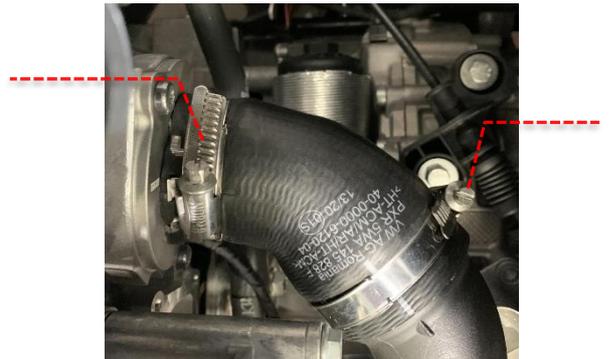

- 3 Remove the 3 x T30 bolts on the muffler and then remove the OE part from the turbo.

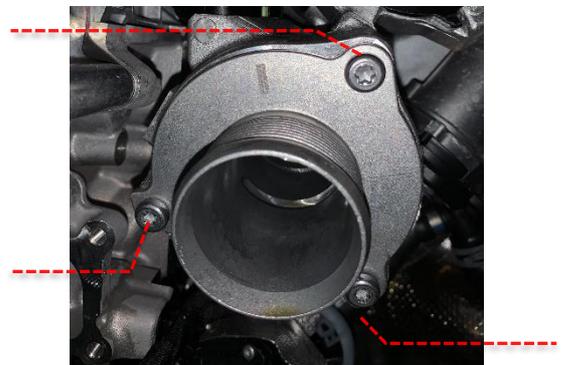

- 4 Install the new Revo turbo muffler delete, making sure the viton o-ring is in place on the muffler. Note: it is advisable to apply a small amount of grease to the seal to allow ease of fitment into the turbo. Make sure the other seal is seated correctly in the groove of the turbo, before pushing the Revo muffler delete all the way in. Secure using the bolts you removed earlier and tighten to the manufacturers torque specification. Refit the discharge pipe hose and all other parts in reverse order of removal, ensure all parts are tightened securely. Test drive the vehicle to ensure there are no leaks/part interference during operation. Your installation is now complete!

