

Fitting Instructions

Revo Turbo Muffler Delete Kit VAG 2.0/1.8 TFSI/TSI Transverse Mount

Fitting Difficulty



Contents

Description	
Revo Muffler Delete Kit	1

Recommended Tools

Tools	Size
Ratchet	
Socket	7mm
Hex Key	6mm



Before starting, please ensure that the engine is cool. Engine temperatures can remain high for a substantial amount of time after use.




Fitting Instructions

Fitting Difficulty


Revo Turbo Muffler Delete Kit VAG 2.0/1.8 TFSI/TSI Transverse Mount




- 1 Remove the airbox by loosening the hose clamp securing the pipe to the turbo, then pull upwards on the airbox to remove from rubber grommets. Picture A is for MQB platform and picture B is for the Polo/S1 platform.

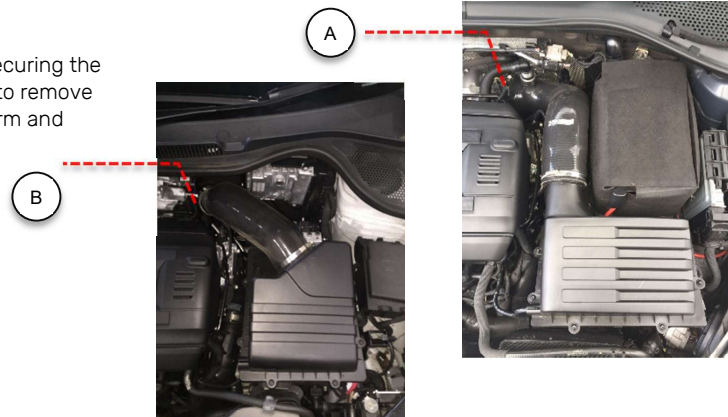

- 2 Next, loosen the hose clamp securing the discharge hose to the OE muffler and pull the hose off.

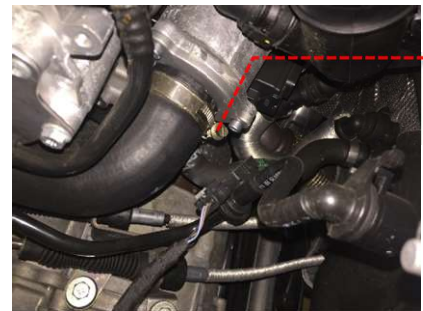

- 3 Remove the 3 x bolts on the muffler and then remove the OE part from the turbo.

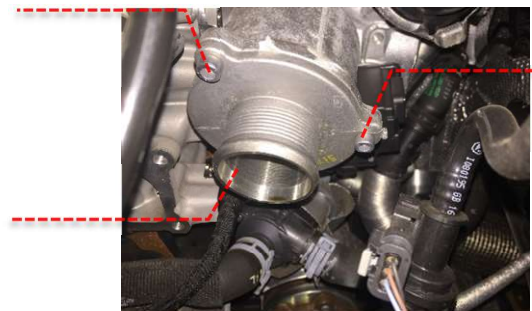

- 4 Install the new Revo turbo muffler delete, making sure the rubber seal is fitted to the bottom muffler delete. Note: it is advisable to apply a small amount of grease to the seal to allow ease of fitment into the turbo. Make sure the other seal is seated correctly in the groove of the turbo, before pushing the Revo muffler delete all the way in. Secure using the bolts you removed earlier and tighten to the manufacturers torque specification. Refit the discharge pipe and all other parts in reverse order of removal, ensure all parts are tightened securely. Test drive the vehicle to ensure there are no leaks/part interference during operation. Your installation is now complete!

